


Elevation Keypad / Wall Switch Retrofit

Existing System: Elevation

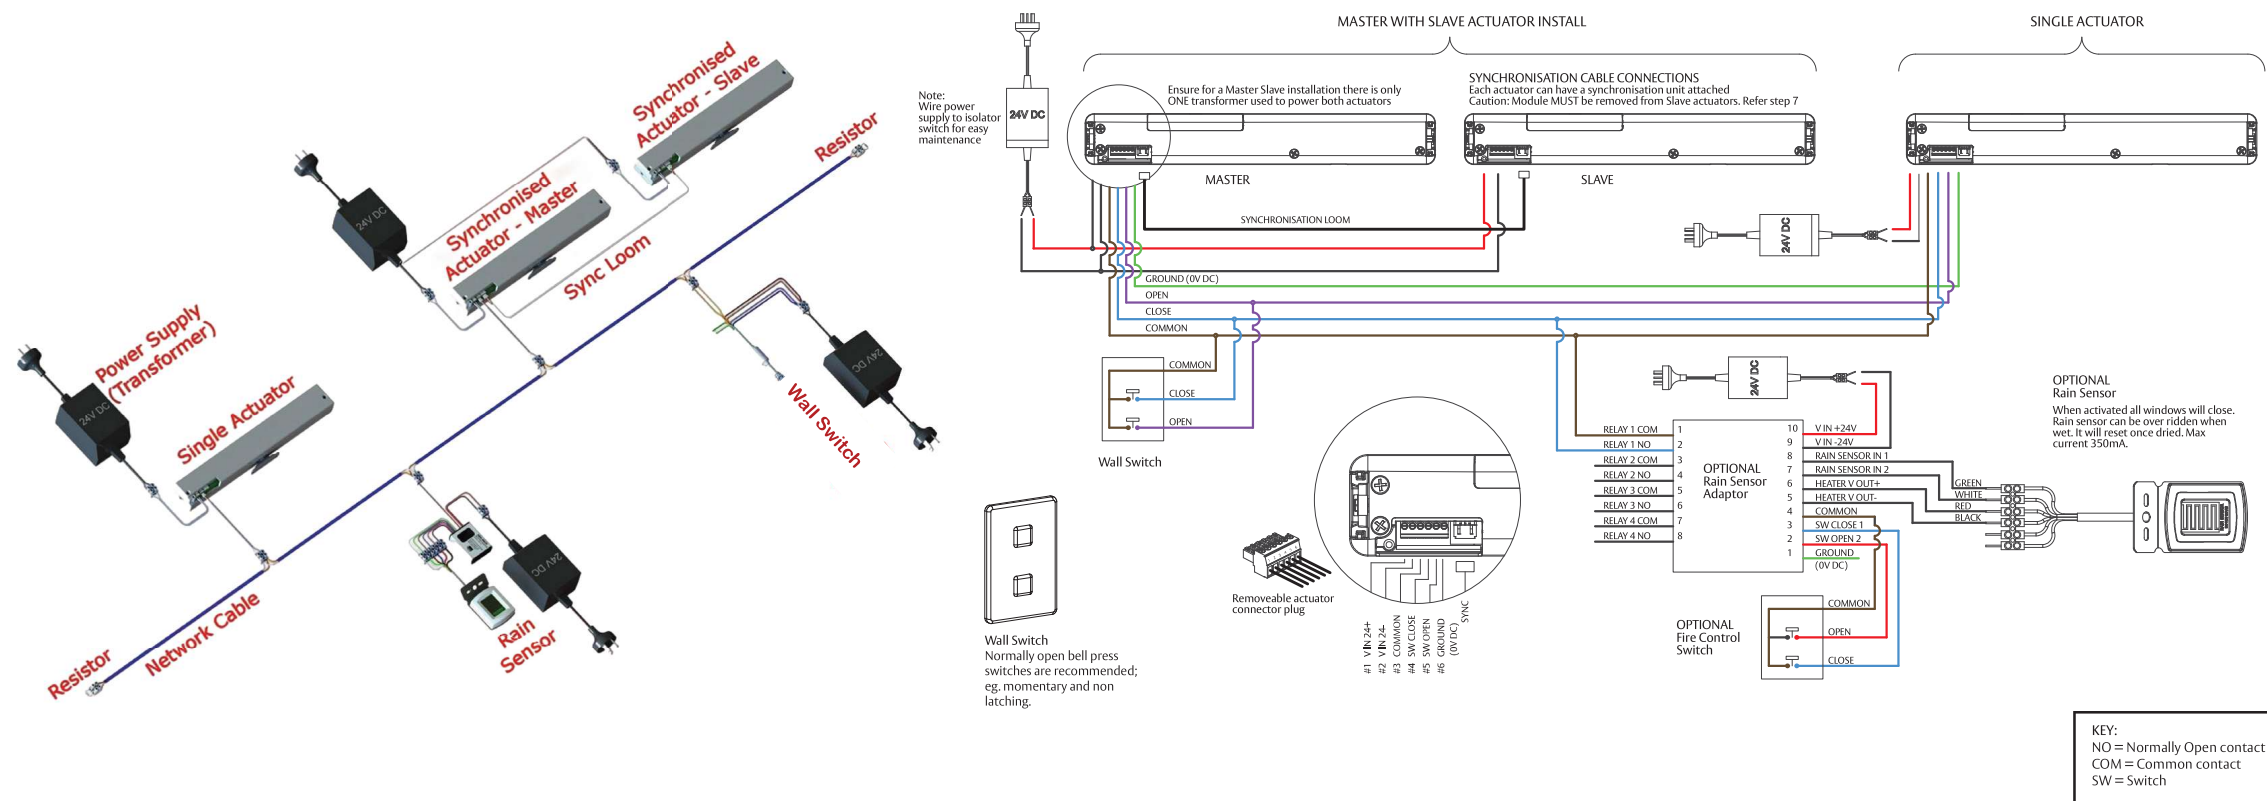

Wiring circuit guide:

1. 24V DC transformer must be used to power Aeris Actuator
2. Existing Elevation 24V DC transformer can be retained to power up Aeris Actuator. Extend power cables if required
3. Turn off the system power
4. Disconnect the Network and power supply cables from Elevation actuator unit which needs to be replaced
5. Install Aeris Actuator using existing power supply
6. Elevation network adaptor won't work with Aeris system. New Aeris rain sensor network adaptor required. Use existing Power supply and rain sensor unit
7. Determine Elevation chain opening length

Mechanical Installation:

1. Remove Elevation sash bracket from the window
2. Remove pivot brackets and fixing screws. Detach Elevation unit from the window sill
3. Follow Aeris Window Actuator installation instruction on how to install Aeris Actuator
4. Once Aeris Actuator is installed, restrict its opening length to match Elevation as closely as possible
5. Connect/setup wireless hub with Aeris Actuators using Remote or Lockwood Home app. Refer quick start guide

Note:

1. Aeris Actuator cannot use Elevation wall switch or Keypad setup
2. Aeris system must be connected with the hub to use wireless remote or Lockwood Home App
3. When replacing one Elevation actuator unit from group of actuators, manually remove actuator from the touch screen keypad zones
4. For Elevation wall switch setup, just remove the network data cable
5. Existing screw holes may need to be filled and new holes needs to be drilled
6. While drilling new holes take extreme care to avoid drilling into the glazing/glass

New System

