



LOCK SETTING

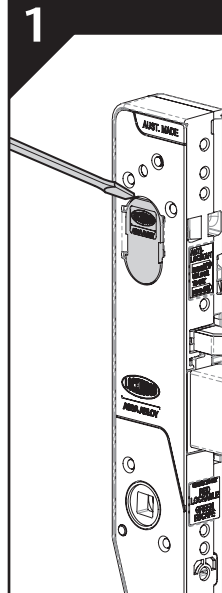

- Where cylinders or turn knobs are required, remove the cylinder plugs from the lock using a small screwdriver.
- Set the required lock function as per **SETTING AND OPERATING INSTRUCTIONS** and the **FUNCTION CHART** on the reverse of this instruction.

DOOR PREPARATION

- **Note** : Dual cylinder kit suits 43 - 46mm door thickness only.
- Establish height that lock will be on door.
- Cut face plate window to the dimensions shown. Drill and countersink fixing holes as shown.
- Determine what lever, cylinder or turn knob holes are required.
- Drill required furniture holes from both sides of door.

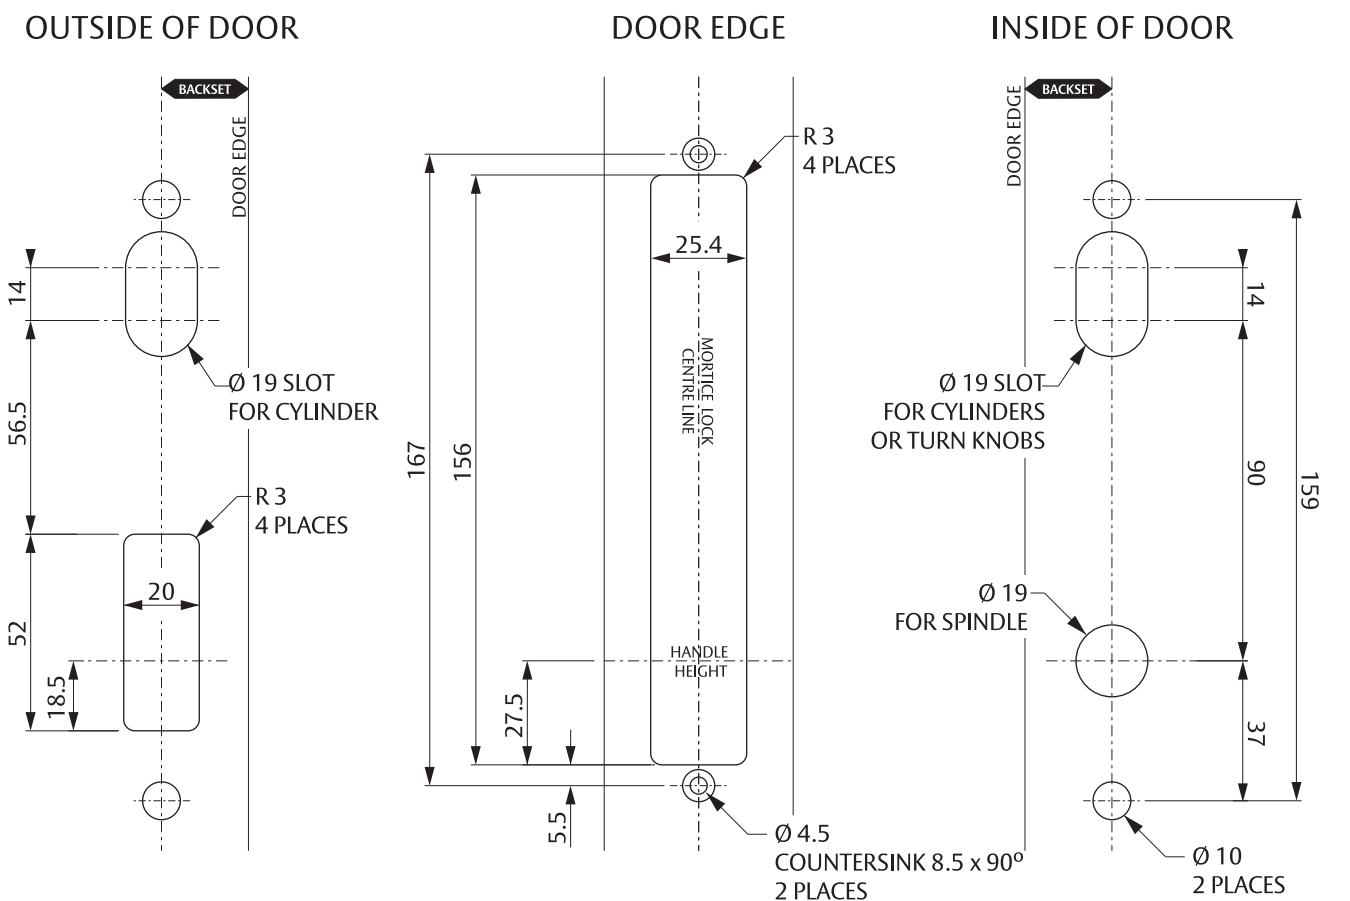

3 LOCK INSTALLATION

- Tilt lock through face plate window, lower into aluminium section and align screw holes.
- Secure with 8mm long screws provided.
- To hand the latching bolt, pull latch bolt forward and rotate to required handing.

4 LOWER CYLINDER PREPARATION

- Fit spindle to cylinder using cylinder cam screws.
- Fit cylinder to lower cylinder plate using supplied 8mm long screws.

5 CYLINDER INSTALLATION

- Place the upper cylinder into the lock and secure by pressing in the retainer pin, ensuring the pin is flush with the lock case.
- Place the lower cylinder assembly into lock. Lower cylinder will be secured when furniture is fitted.

6 FACE PLATE AND SPINDLE INSTALLATION

- Fit face plate onto lock using the supplied 8mm long screws.
- On the internal side of door, fit spring to spindle and then fit into lock hubs.
- Install furniture according to instructions.

7 STRIKE INSTALLATION

- Cut strike cutout in door frame.
- Fit strike box inside frame using supplied 8mm long screws.
- Fit strike onto strike box using supplied 8mm long screws.

Dimensions: 28.5, 38, 70, 86, R3 4 PLACES, MORTICE LOCK CENTRE LINE, Ø 4.5 COUNTERSINK 8.5 x 90° 2 PLACES

Function description	External cam or adaptor	Hub setting	Anti-lockout setting	Locking bar position	Internal cam or adaptor
3787X- Dual entry lock <i>Two cylinders outside.</i> Outside : Opened by key. Keys are keyed to differ. Inside : Opened by handle at all times.			OFF		
3787-T Key entry privacy lock <i>Cylinder outside, emergency button and turn knob.</i> Outside : Opened by key when unlocked. Emergency button locks or unlocks outside key and inside handle - operated by screwdriver or coin. Inside : Opened by handle when unlocked. Turn knob locks or unlocks outside key and inside handle.			OFF		
3787-TA Key entry privacy lock with anti-lockout * <i>Cylinder outside, emergency button and turn knob.</i> Outside : Opened by key when unlocked. Emergency button locks or unlocks outside key and inside handle - operated by screwdriver or coin. Inside : Opened by handle when unlocked. Turn knob locks or unlocks outside key and inside handle.			ON		

* **Anti-lockout lock** - closing the door or retracting the latch bolt unlocks the lock preventing lock out situations.