


THIS INSTRUCTION COVERS REBATED DOOR PREPARATION AND SECURING THE LOCK INTO THE REBATED DOOR. FOR HOLE LOCATIONS, CYLINDER AND ADAPTOR INSTALLATION INSTRUCTIONS AND FUNCTION SETTING INSTRUCTIONS - REFER TO THE INSTRUCTIONS SUPPLIED WITH THE LOCK.

P/No. 3770RK-121 01/16

### 1 DOOR PREPARATION - LOCK SIDE

#### SPACER DIMENSIONS

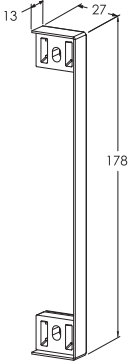

- Set lock and install cylinders as per standard **MOUNTING INSTRUCTIONS**.
- Use spacer as template to mark required cutout in the rebate.
- Cut recess allowing front of spacer to be flush with front of rebate, cut lock mortice and furniture holes as required.

STRIKE SIDE      LOCK SIDE

Viewed from this direction →

### 2 LOCK INSTALLATION


- Fit lock onto spacer and place into mortice.
- Drill 2.5mm pilot holes and secure the lock using the supplied 45mm long screws.

STRIKE SIDE      LOCK SIDE

Viewed from this direction →

### 3 PREPARATION - STRIKE SIDE

#### STRIKE DIMENSIONS

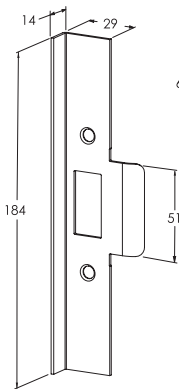

- Use strike as a template to mark required cutout onto the door.
- Mortice door frame to allow strike to sit flush with lower face.
- Mortice recess for latch bolt 15mm deep.
- For electric mortice lock magnets, drill  $\text{Ø}25 \times 2\text{mm}$  deep and  $\text{Ø}19 \times 20\text{mm}$  deep as shown.

STRIKE SIDE      LOCK SIDE

Viewed from this direction ←

### 4 STRIKE INSTALLATION

- For electric mortice locks, insert magnet in hole.
- Drill 2.5mm pilot holes and secure the strike plate using the supplied 30mm long screws.

STRIKE SIDE      LOCK SIDE

Viewed from this direction ←

### STRIKE OPTIONS FOR REBATE KITS

3571-2902



Lipless strike

3772-RK32



32mm lip strike

3772-RK46



46mm lip strike

