



MOUNTING INSTRUCTIONS

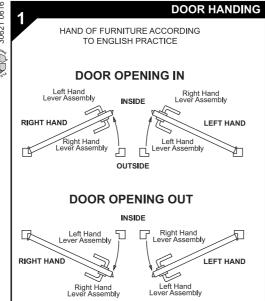







OUTSIDE

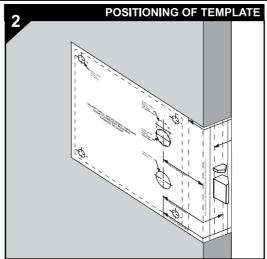

- Align template with cover plate on Lockwood mortice lock.
- Mark and drill necessary holes accurately.
- Remember to mark both sides of door.
- Do not drill right through door from one side to prevent possible damage to door.

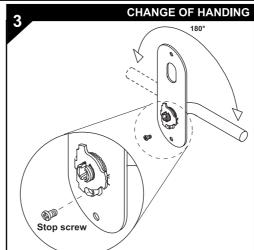

- Verify correct handing of Furniture on the door required. Lever should rotate downwards.
- Position the handle by rotating it 180° to suit the door LH or RH then insert the 4mm stop screw to suit.

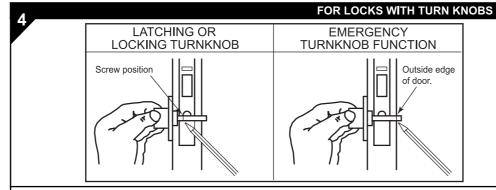

- Mark correct length of connecting bar as shown.
 - For Latching or Locking turnknob, mark the connecting bar at the edge of the screw on the mounted lock faceplate. - For **Emergency** turnknob, mark the connecting bar at the outside edge of the door.
- Cut connecting bar to length, remembering to remove the burr. Attach turn knob to door using screws supplied.
- NOTE: When lockset is in unlocked condition, turn knob to be vertical.

SCREW LENGTH External plate Furniture screw 3mm

- If necessary, cut screws to length and deburr ends
- Ensure Furniture screws do not protrude past the opposite face of the door.

ASSA ABLOY Australia Pty Limited, 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 907 © 2016

The Global Leader in Door Opening solutions

ASSA ABLOY