

Lockwood Hasp and Staple PA/21/190/DP

<u>Installation Instructions</u>

PA21L190-121(1)


Prior to fitting this padlock accessory, familiarise yourself with its simple function and plan the position to best suit your requirement, taking into account the following:

- Modifications to the structure to accommodate the accessory
- Inward, outward, or sliding operation
- Right or left hand operation
- Position to give maximum fixing strength
- Orientation to suit fixed or opening leaf

Note: The security rating of this product was achieved using the fasteners supplied in the pack. The use of fasteners other than those supplied can affect the security performance.


Mounting instructions

- 1. Modify the structure to accommodate the accessory if required.
- 2. Position the template or product carefully within the limits of the mount position and mark all fixing holes.
- 3. Drill the holes to suit the fasteners provided.
- 4. Mount the accessory using the fasteners provided.

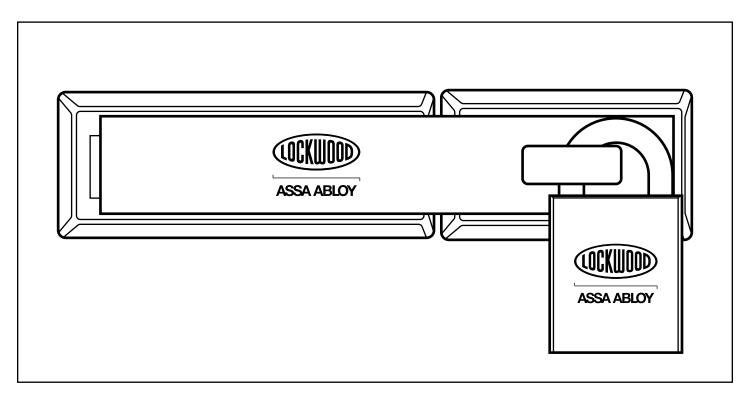

Cut along the dotted line

Template

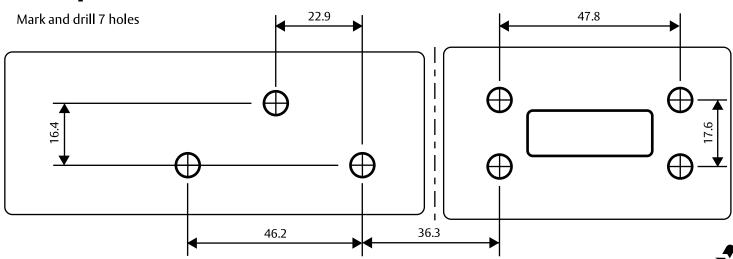

ASSA ABLOY Australia Pty Limited, 235 Huntingdale Rd, Oakleigh, VIC 3166 ABN 90 086 451 907 ©2025